

Installation instructions for UANGM-2793-00, UANGM-2794-00
Under Run Protective Shield Fuel Tank

TOYOTA RAV4



LEXUS NX



Model year:

RAV4 - 2012 - 2015 -

NX

2014

Applicability:

ZSA44L-ANFXK; ZSA44L-ANXXK
ZSA44L-ANXGK; ZSA44L-ANYXKX
ZSA44L-ANYMKX; ALA49L-ANTGXX
ASA44L-ANTGKX; ASA44L-ANTMKX
ALA49L-ANTMXX; ZSA42L-ANYXKX
ZSA44L-ANFMKX; ZSA42L-ANYMKX
ZSA42L-ANFXKX; ALA49L-ANTGYW

all sfx
except NX300h

Part Number:

Steel: UANGM-2793-00
Aluminium: UANGM-2794-00



Weight:

Steel: 14.10 kg
Aluminium: 10.09 kg




Installation Time:

30 min


Rev.1 12.10.2015

A

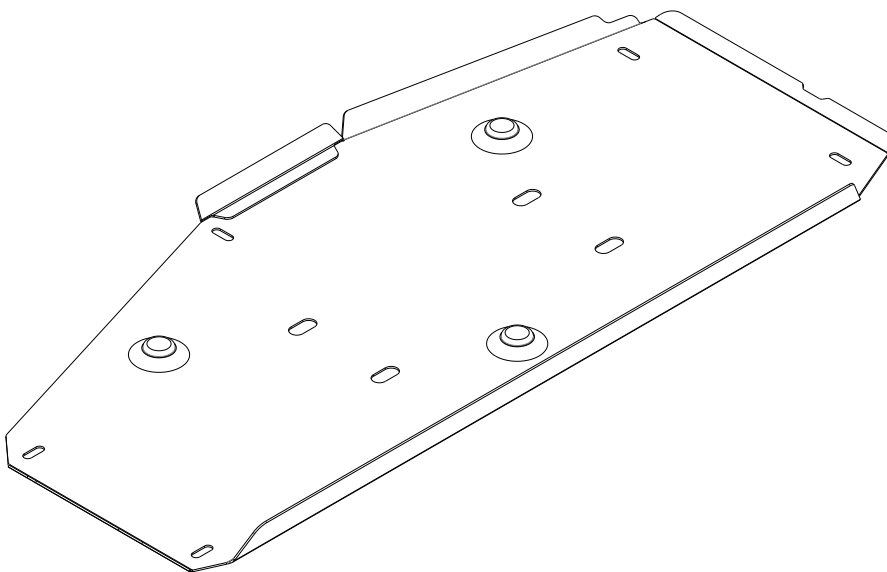

UANGM-02793-60

B




1x

C




1x

D

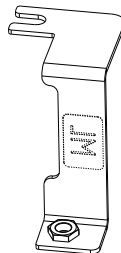


1x

E

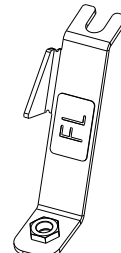


1x

F



1x


G

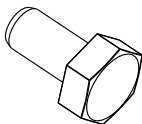

M10x30

5x


H



d=10

5x


I

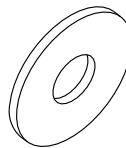

d=10


5x

J

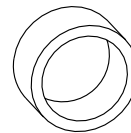


h=10


1x

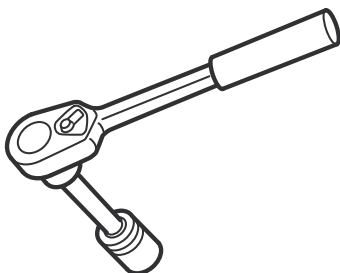



17 mm

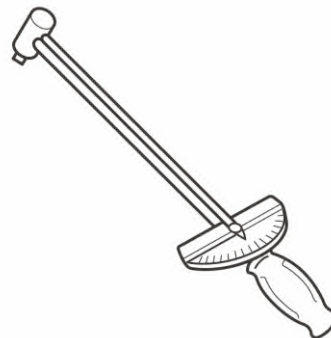


1

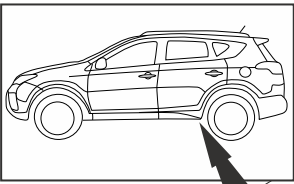


FWD


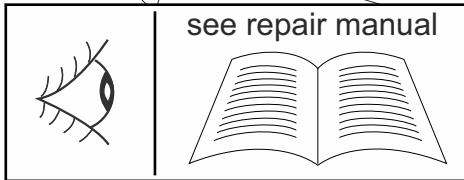
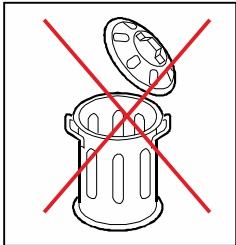


2

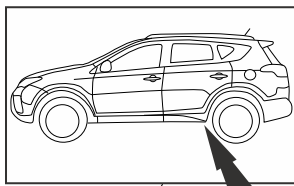


FWD



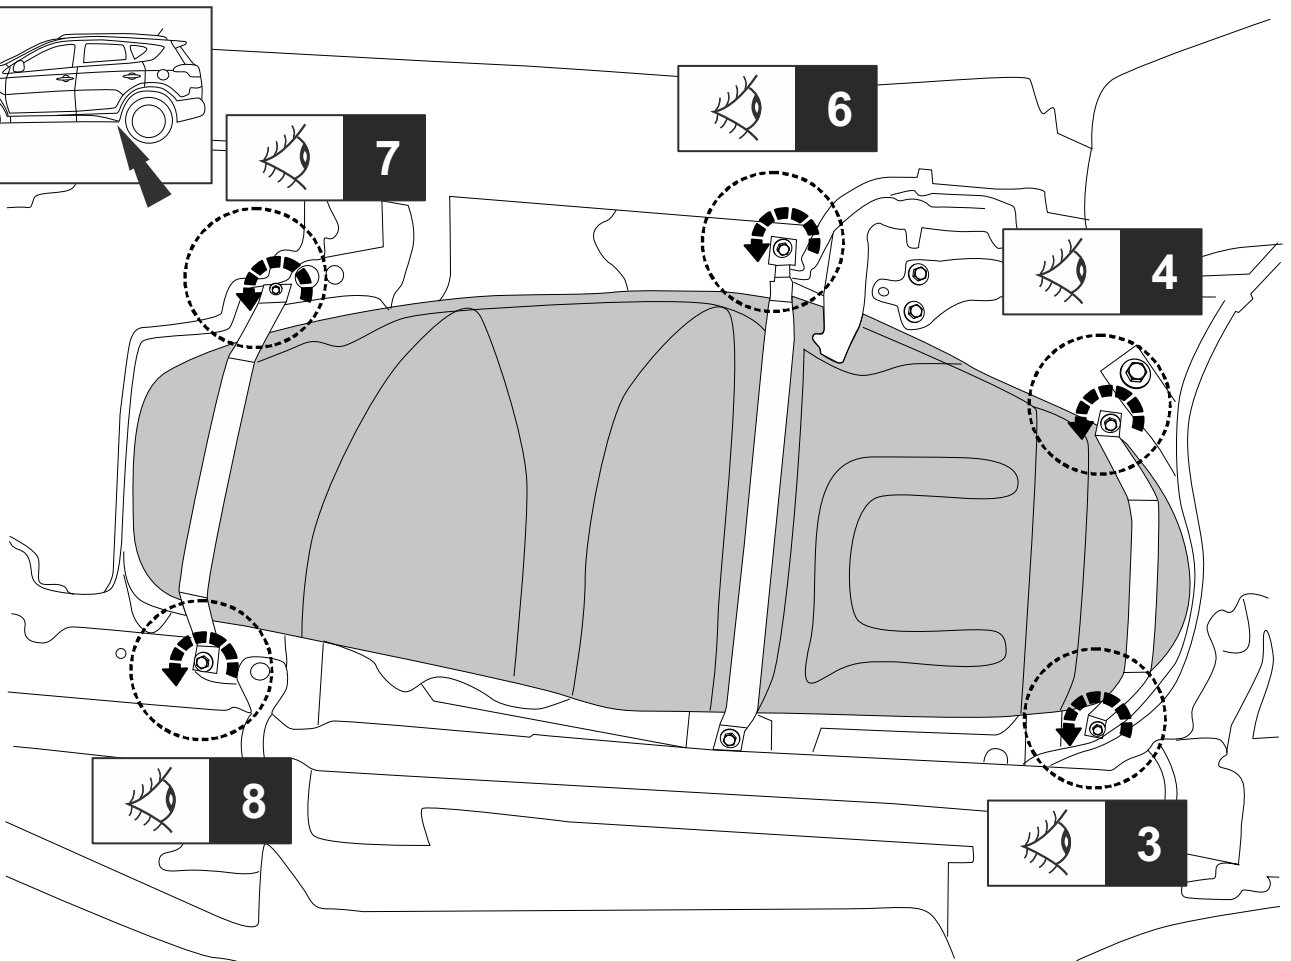


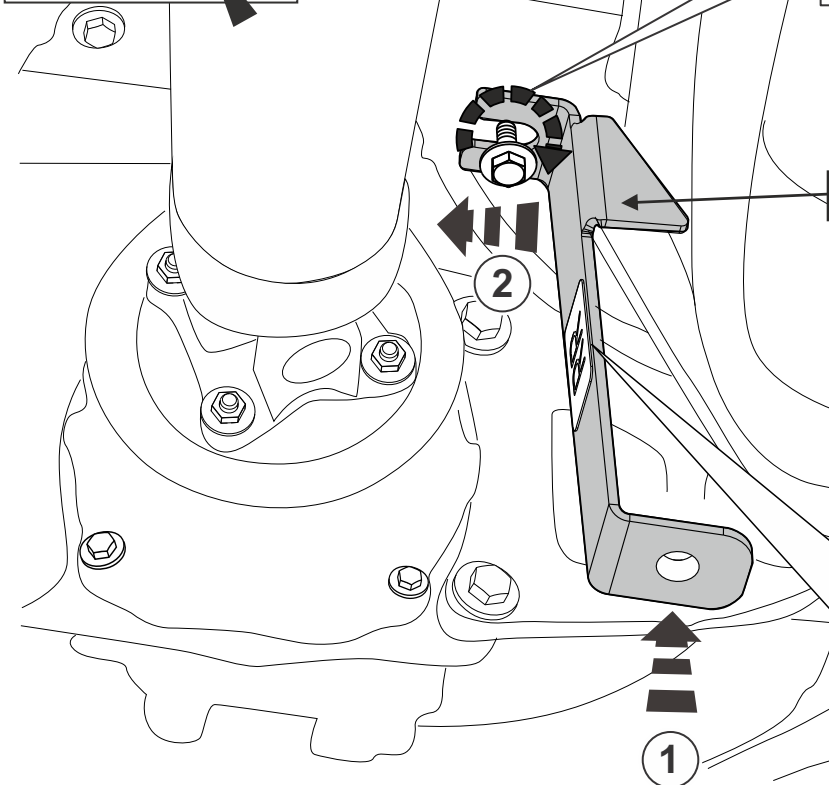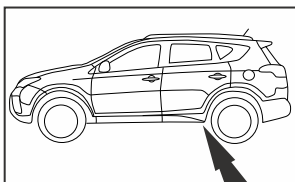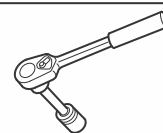3**3**


17 mm

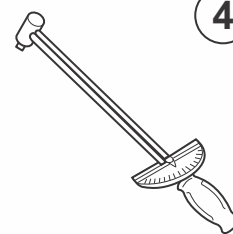4


45 Nm

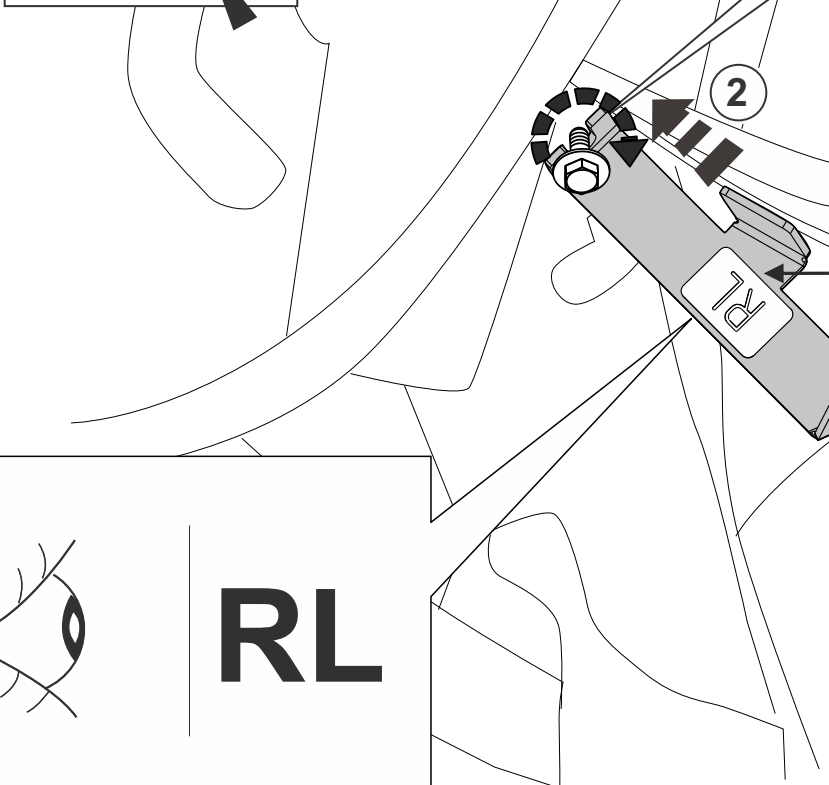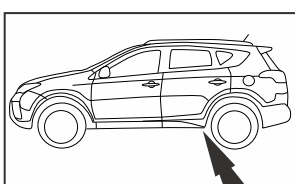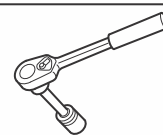**RR****4****3**


17 mm

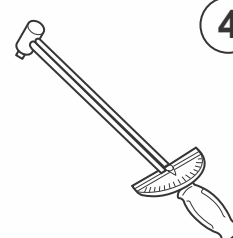4


45 Nm

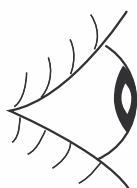**RL**


5

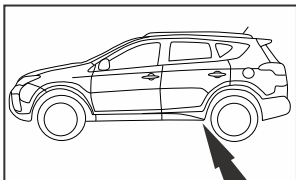

FWD

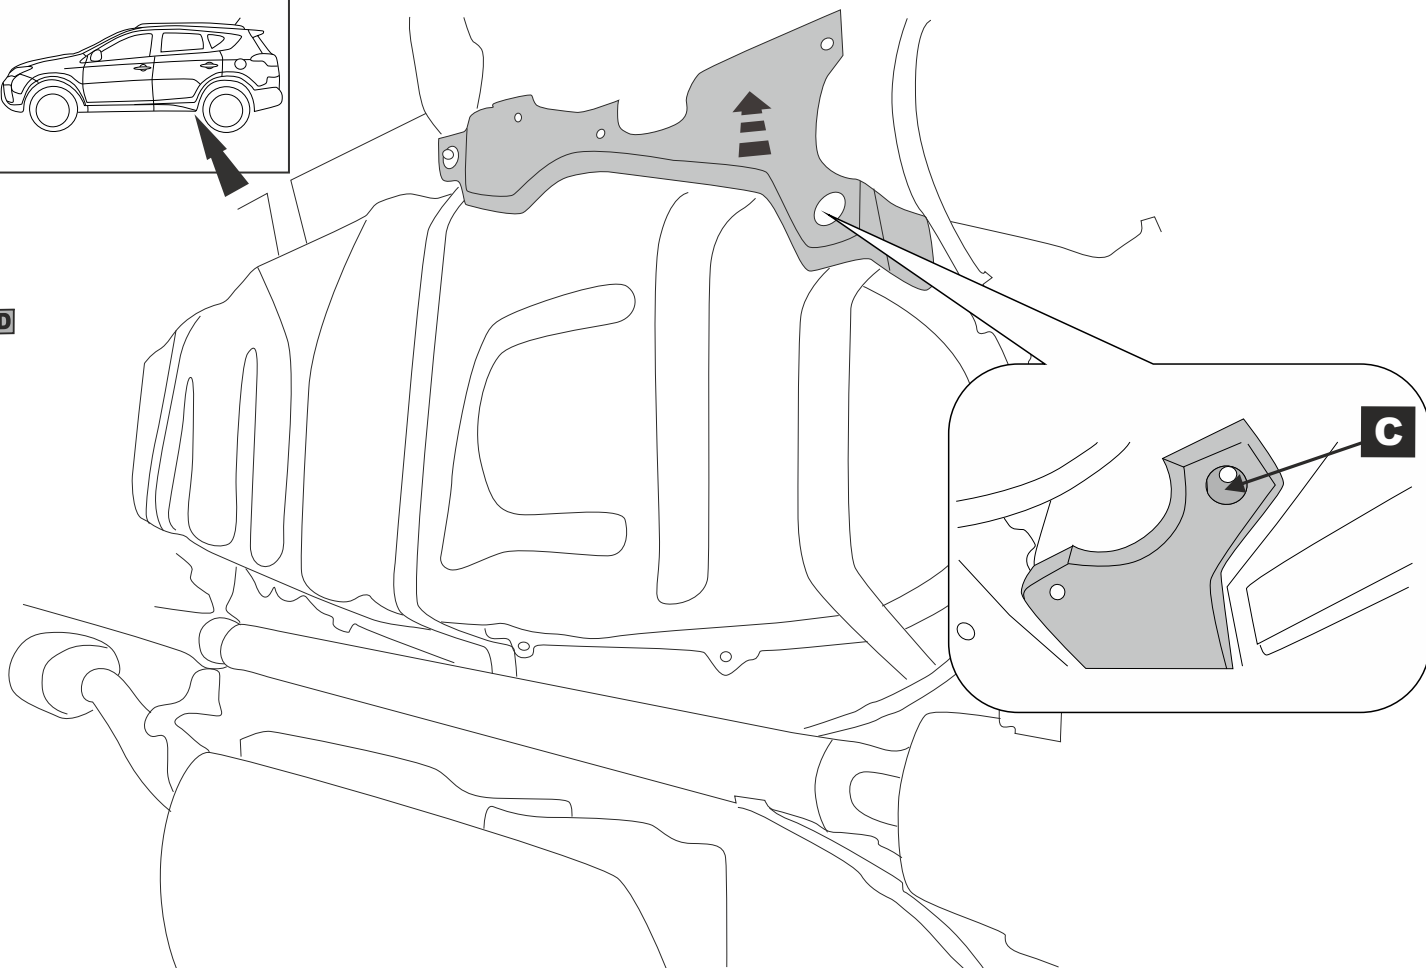


6

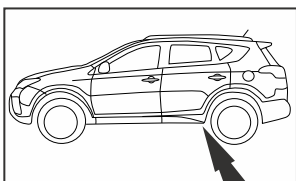


FWD

3

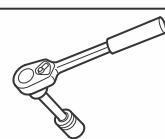

17 mm

4

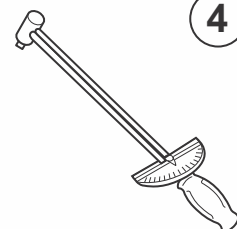


45 Nm

2



D

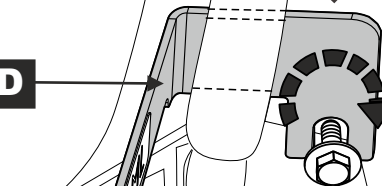


1




ML

7

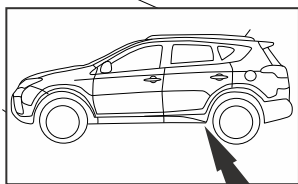


3

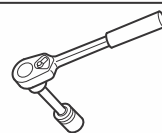

17 mm

4

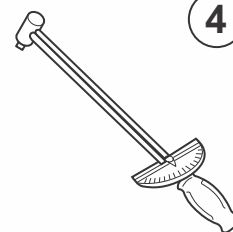

45 Nm

2

1


E



FL


FWD

8

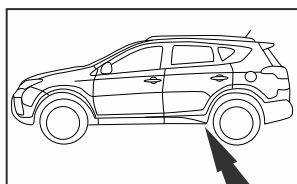


FWD

3

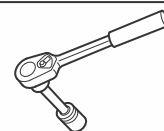

17 mm

4

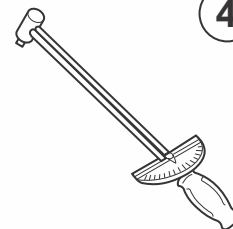

45 Nm

2


1

F



FR

9

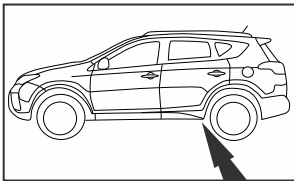


FWD




see repair manual




10

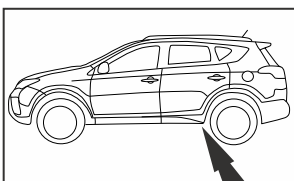

FWD

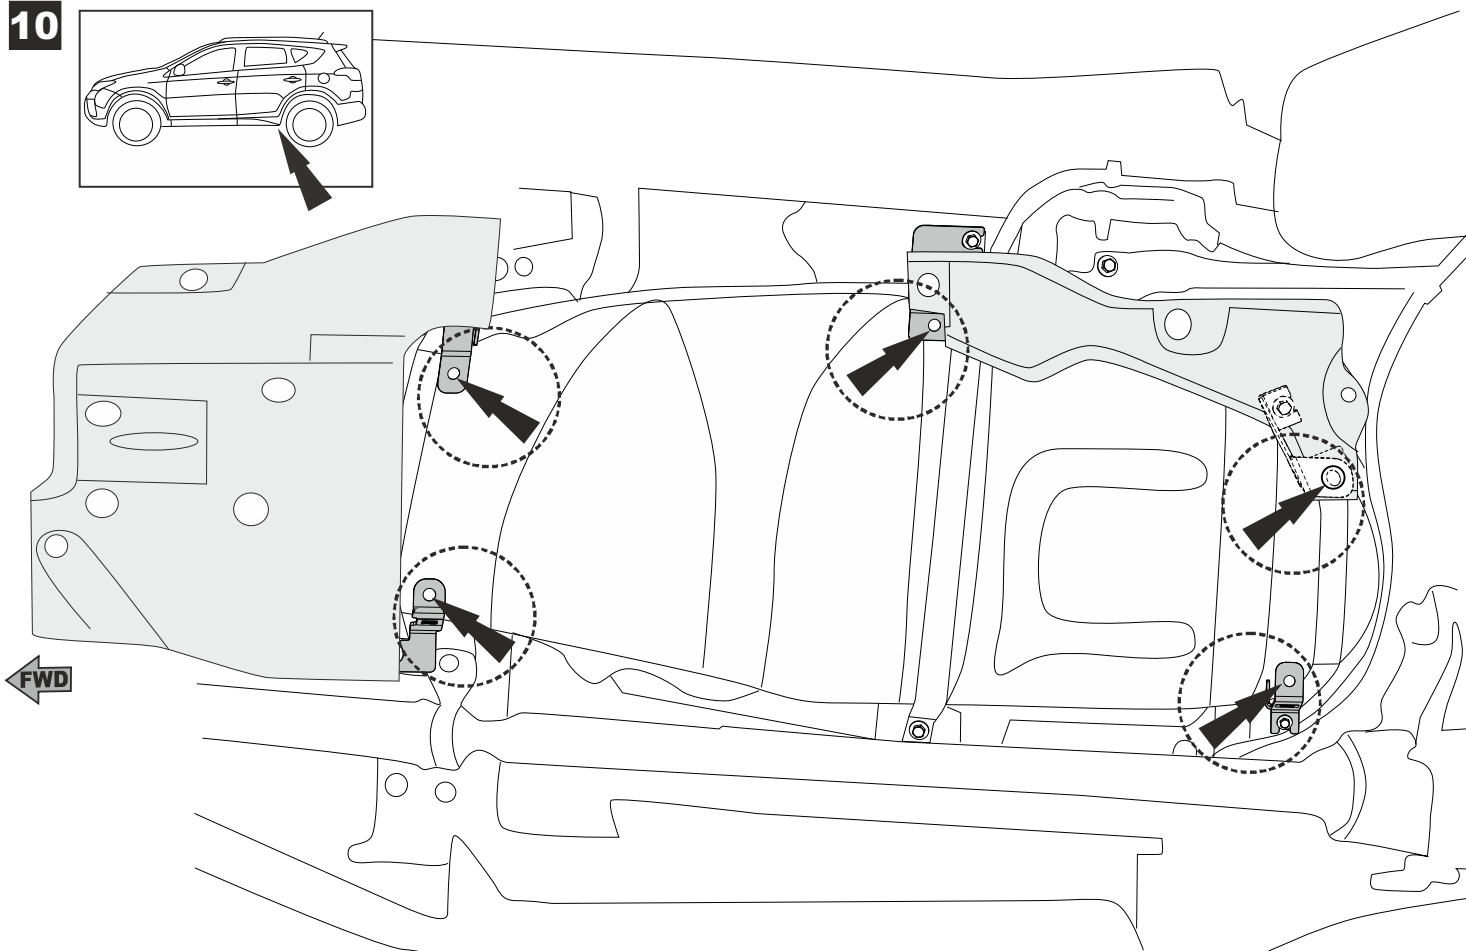

11

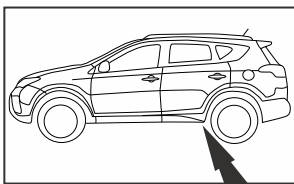


A


G H I

J

**I
H
G**

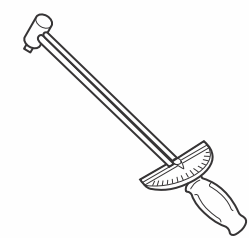


47 Nm

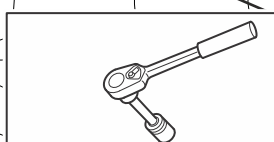


17 mm

12

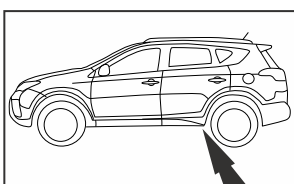

FWD

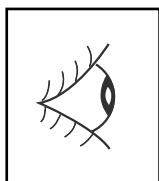

Part number:
UANGM-2793-00
UANGM-2794-00

Revision:
1

Date:
18.12.15

RAV4 2012 - 2015; NX 2014

Page:
8/8